


TELE-SONIC 0101800 CONTROL & SWITCH FUNCTION

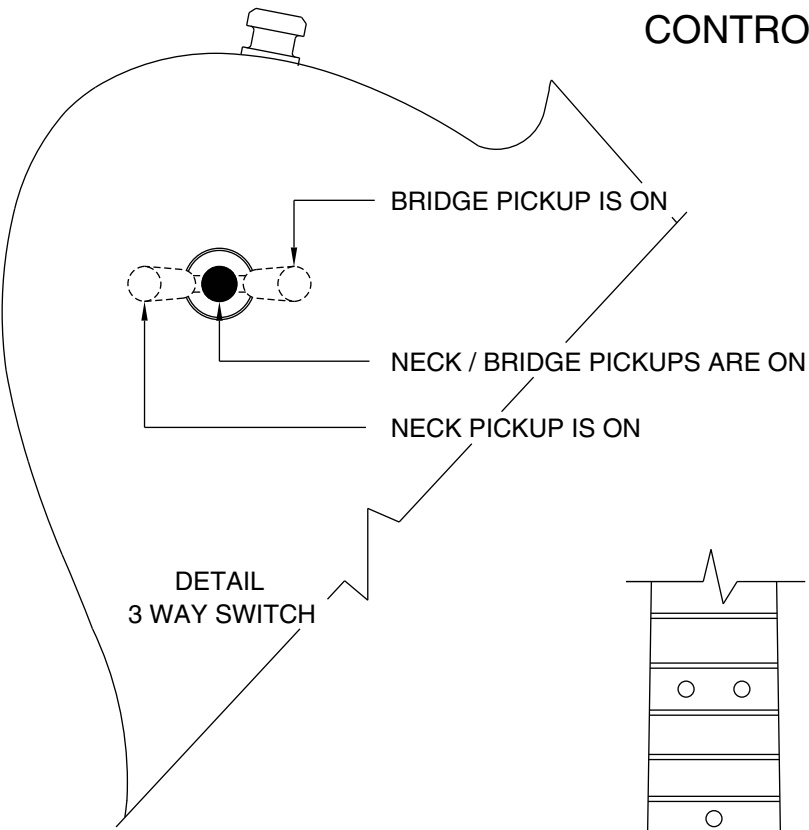


3 WAY SWITCH POSITION			
● ○ ○ 1	○ ● ○ 2	○ ○ ● 3	← 3 WAY SWITCH POSITION
VI & T1	VI & V2 T1 & T2	VI & T1	← TONE/VOLUME CONTROL
■	■	□	← NECK PICKUP
□	■	■	← BRIDGE PICKUP
	■		← PICKUP IS ON
	□		← PICKUP IS OFF

SEE 3 WAY SWITCH &
DETAIL DIAGRAM

○ ○ ○
1 2 3

NECK PICKUP

BRIDGE PICKUP

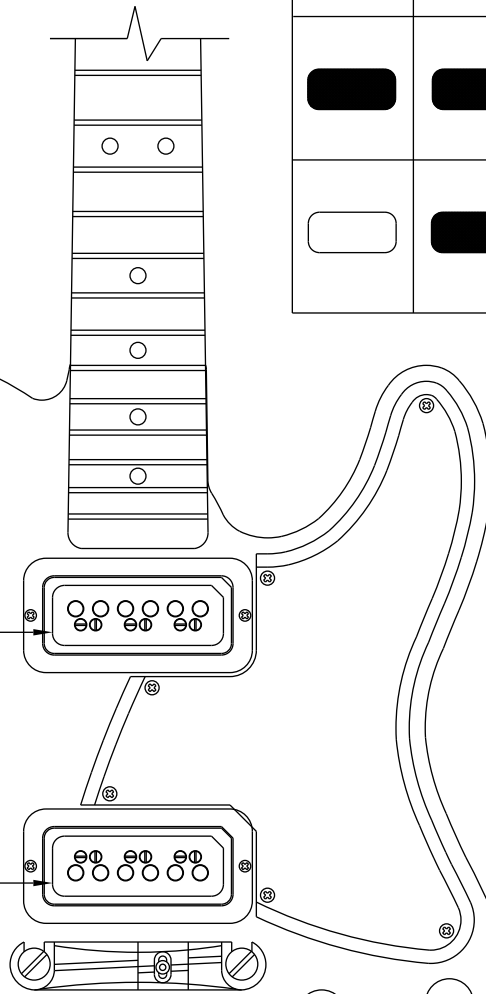

VOLUME (V2)

VOLUME (V1)

TONE (T2)

TONE (T1)