



AMERICAN DELUXE POWER TELECASTER 0105700/5702

SWITCH & CONTROL FUNCTION

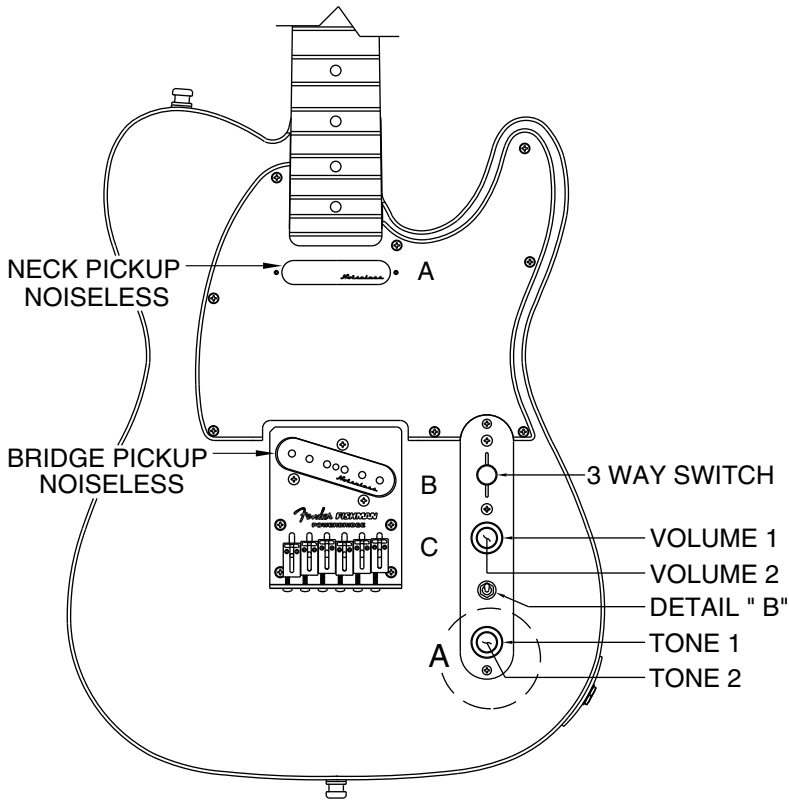


3 WAY SWITCH POSITION			
			← 3 WAY SWITCH POSITION
			← NECK PICKUP
			← BRIDGE PICKUP
MIX SELECTOR SWITCH			
3	2	1	
3-Way Pickup Switch	3-Way Pickup Switch	—	
—	Piezo Pickup	Piezo Pickup	
Volume 1	Vol. 1 + Vol. 2	Volume 2	
Tone 1	Tone 1 + Tone 2	Tone 2	

A	Pickup (Neck)	LEGEND	
B	Pickup (Bridge)		
C	Piezo Pickup in Bridge-Sections		
Volume 1	Volume Control affects only Magnetic pickups		
Volume 2	Volume Control affects only Piezo pickups		
Tone 1	Tone Control Passive affects only Magnetic Pickups		
Tone 2	Tone Control Active affects only Piezo pickups		
	← PICKUP IS OFF		← PICKUP IS ON

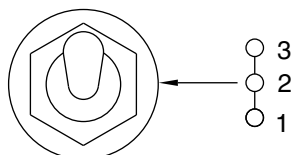

DETAIL " B "

N.T.S.

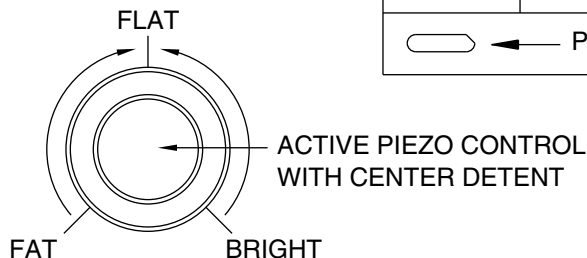

DETAIL " A "

N.T.S.