 
 
 

 
 






 



# JIMI HENDRIX TRIBUTE STRATOCASTER 0106822

## SWITCH & CONTROL FUNCTION

3 WAY SWITCH POSITION			
 3	 2	 1	← 3 WAY SWITCH POSITION
T1	T2	—	← TONE CONTROL
			← NECK PICKUP
			← MIDDLE PICKUP
			← BRIDGE PICKUP
PICKUP IS OFF → 			← PICKUP IS ON

