


JAMES BURTON TELECASTER 0108602

SWITCH & CONTROL FUNCTION




5 WAY SWITCH POSITION					
					← 5 WAY SWITCH POSITION
					← NECK PICKUP
					← MIDDLE PICKUP
					← BRIDGE PICKUP
	← PICKUP IS ON				← PICKUP IS OFF

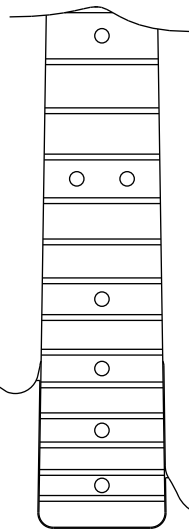

NECK PICKUP

MIDDLE PICKUP

  BRIDGE PICKUP

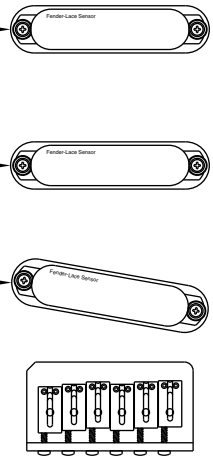

SEE 3 WAY SWITCH & DETAIL DIAGRAM

MASTER VOLUME

MASTER TONE

