

SUB - SONIC 0114530 / 4532  
SWITCH & CONTROL FUNCTION

5 WAY SWITCH POSITION					
● 5 ○ ○ ○ ○	○ 4 ● ○ ○ ○	○ 3 ○ ● ○ ○	○ 2 ○ ● ○ ○	○ 1 ○ ○ ○ ●	← 5 WAY SWITCH POSITION
T1	T1	T1	T1	T2	← TONE CONTROL
█	█	○	○	○	← NECK PICKUP
○	█	█	█	○	← MIDDLE PICKUP
○	○	○	█	█	← BRIDGE PICKUP (A) ← BRIDGE PICKUP (B)
					← PICKUP IS OFF
					← PICKUP IS ON

