

AMERICAN TELECASTER / LEFT HAND / 0118422

REF.#	P/N	DESCRIPTION
1	0056221000	Neck, American Telecaster, M/N
2	0056261000	Tuning Key, (1) Set, E,B,G,D
3	0022151000	Tuning Key, (1) Set
4	0083675000	Bone Nut
5	0021537000	String Retainer
	0021405000	Mounting Screw
6	0020810000	Truss Rod Adjustment Nut
	0023811000	Truss Rod Adjusting Wrench
7	0056187xxx	Body, Am. Tele., Solid Paint
	0056231xxx	Body, Am. Tele., Ash Paint
	0055222xxx	Body, Am. Tele., Sunburst
8	0054038000	Neck Mounting Plate
	0021424000	Mounting Screw
	0031571000	Tilt Adjustment Screw
	0023811000	Tilt Adjusting Wrench
9	0021453000	Strap Button
	0021422000	Mounting Screw
	0019056000	Felt Washer, Black
	0020491000	Felt Washer, White
10	0056201000	Pickguard, Am. Tele., Parch/Black/Parch
	0021407000	Mounting Screw
11	0050890000	Pickup, Neck, Hot, Am. Tele
	0021409000	Mounting Screw
	0039409000	Tubing, Latex Cut
12	0050888000	Pickup, Bridge, Hot, Am. Tele
	0048631000	Mounting Screw
	0036878000	Tubing, Latex Cut
13	0019064000	Control, 250K, Audio, (2)
	0016352000	Mounting Hex Nut
	0016436000	Lock Washer, Intl.
14	0013359000	Knob, Knurled (2)
	0028897001	Screw Set
15	0033134060	Control Plate
	0021407000	Mounting Screw
16	0053290000	Switch, Lever 3-Position
	0021413000	Mounting Screw
	0018359000	Knob, Black
17	0024832000	Capacitor, .022uf
18	0021956000	Output Jack
	0016352000	Mounting Hex Nut
	0016436000	Lock Washer, Intl
19	0021452000	Jack Ferrule
20	0028192000	Bridge Assembly, Telecaster
	0021373000	Mounting Screw
21	0028193000	Bridge Plate
22	0026111000	Bridge Section, (6)
23	0017031000	Intonation Screw, 1 - 4
	0029094000	Intonation Spring, 1 - 4
	0031913000	Intonation Screw, 5 & 6
	0029095000	Intonation Spring, 5 & 6
24	0026780000	Height Adjustment Screw, 1 & 6
	0018027000	Height Adjustment Set Screw 2 - 5
	0018531000	Adjusting Wrench, Saddle Height
25	0021429000	Ferrule, String Retainer (6)

Body Part Number	
0055222500	3 Color Sunburst
0056231501	White Blonde
0056187506	Black
0056187515	Hot Rod Red