 



 


 
 
 
 



 


 


 



# 60'S STRATOCASTER 0131000

## SWITCH & CONTROL FUNCTION

5 POSITION SWITCH POSITION					
 5	 4	 3	 2	 1	← 5 WAY SWITCH POSITION
					← NECK PICKUP
					← MIDDLE PICKUP
					← BRIDGE PICKUP
	← PICKUP IS OFF				← PICKUP IS ON

