




 




 
 
 
 



 
 
 




 
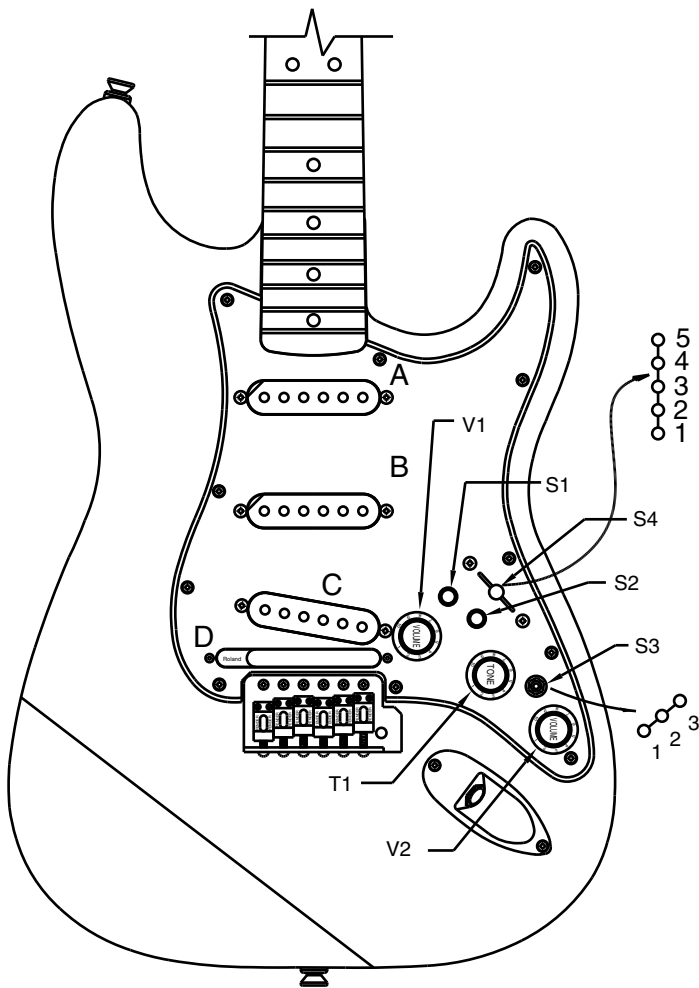


# ROLAND MEX. STRAT 0134660

## SWITCH & CONTROL FUNCTION

TOGGLE SWITCH FUNCTION (S3)		
 3 - GUITAR SOUND	 2 - GUITAR & SYNTHESIZER SOUND	 1 - SYNTHESIZER SOUND

5 WAY SWITCH POSITION (S4)					
					← 5 WAY SWITCH POSITION
V1	V1	V1	V1	V1	← VOLUME CONTROL
T1	T1	T1	T1	T1	← TONE CONTROL
					← NECK PICKUP (A)
					← MIDDLE PICKUP (B)
					← BRIDGE PICKUP (C)
	PICKUP IS ON				PICKUP IS OFF



A	PICKUP (NECK)	T1	TONE 1
B	PICKUP (MIDDLE)	V1	VOLUME 1 GUITAR VOLUME
C	PICKUP (BRIDGE)	V2	VOLUME 2 SYTN VOLUME
D	ROLAND HEXAPHONE PICKUP	S1	SYNTHESIZER FUNCTION SWITCH
S3	TOGGLE SWITCH	S2	SYNTHESIZER FUNCTION SWITCH
S4	5 WAY SWITCH		